

# Feilkoder GE SXS

## GE Refrigerator Quick Error Code Definition (What Does The Error Code Mean?):

**CC:** Check the temperature controls as the temperature for the refrigerator is not correct.

**CI:** Check the ice maker for proper operation.

**DF:** No current flow through the defrost circuit in 48 hours.

**dE:** The defrost system has not been operating properly in the last 24 hours.

**FF:** Check frozen food for thawing because the temperature is rising excessively.

**PF:** The power to the refrigerator has been out from a power outage or similar.

## The GE fridge codes below may seem to be error codes but are normal:

**tC:** If the temperature display shows a tC (could look like an EC, an upside down F with a C), this is not an error code, it is the Turbo Cool (tC) setting.

**tF:** If the temperature display shows a tF (Could look like an EF, an upside down F with an F), this is not an error code, it is the Turbo Freeze (tF) setting.

## These in depth GE error code descriptions can help you troubleshoot a problem with your GE refrigerator:

### **GE Refrigerator Fault Code = 88 or 89**

Refrigerator/Freezer Condition = Possible power surge/electrical issue.

*Repair or Check = Clear the display by unplugging the refrigerator for 5 minutes and then plugging it back in. The control board may have experienced a power surge.*

Replace Parts = Unplug to reset or Control Board faulty

### **GE Refrigerator Fault Code = CC**

Refrigerator/Freezer Condition = Freezer temperature is too warm

*Repair or Check = Freezer temperature has been above normal temp for more than 120 minutes. Adjust the controls according to the instructions in your GE manual. Close the refrigerator and freezer doors completely. Replace the door gaskets if needed. Press the System Check button to clear the error code.*

Replace Parts = Door gasket

### **GE Refrigerator Fault Code = CI**

Refrigerator/Freezer Condition = Ice maker not working properly

*Repair or Check = Clear jammed ice cubes from the ice mold. If the ice mold isn't filling with water, turn back on the water supply to the ice maker. If you turned off the water intentionally, also turn off the ice. Press the System Check button to clear the error code and check for other system failures. If the CI code reappears, replace the complete ice maker assembly.*

Replace Parts = Ice maker assembly

### **GE Refrigerator Fault Code = dE**

Refrigerator/Freezer Condition = Defrost system error

*Repair or Check = The defrost cycle has not run for more than 48 hours. Unplug the refrigerator and reconnect any loose wires in the defrost system. Replace the wire harness if needed. Replace the defrost heater if it is damaged. It may be normal for the refrigerator to operate without defrosting for more than 48 hours when operating in an area that's below 55F degrees. Reset the code by pressing the System Check button.*

Replace Parts = Defrost system components

**GE Refrigerator Fault Code = DF**

Refrigerator/Freezer Condition = No current flow through the defrost circuit in 48 hours

*Repair or Check = Check defrost heater, defrost thermostat and the defrost timer. Press the System Check button to clear the error code.*

Replace Parts = Defrost heater, Defrost thermostat or Defrost timer

**GE Refrigerator Fault Code = E2**

Refrigerator/Freezer Condition = Main control board error

*Repair or Check = Check wire harness to Main control board*

Replace Parts = Main control board

**GE Refrigerator Fault Code = FF**

Refrigerator/Freezer Condition = Check frozen foods for thawing

*Repair or Check = Freezer temperature has been above normal for more than 2 hours.*

*Make sure that the refrigerator and freezer doors are closed. Replace the door gaskets if needed. Press the System Check button to clear the error code and check for other system failures. If the PF code appears, then the FF code, this was likely caused by a power failure. Keep the refrigerator and freezer doors closed as much as possible to allow the interior temperatures to come back to normal.*

Replace Parts = Door gasket

**GE Refrigerator Fault Code = HRS**

Refrigerator/Freezer Condition = Unit stuck in Defrost

*Repair or Check = Main board / Check wire harnesses*

Replace Parts = Main board or Wire harness

**To clear an error code on your GE refrigerator, press the System Check button to clear the code. If the code comes back, then this means a component, part, or other problem is present in your refrigerator, refer to the codes above.**